




Olympus Stylus 1010 Flash Replacement

Written By: Curtis Reedy

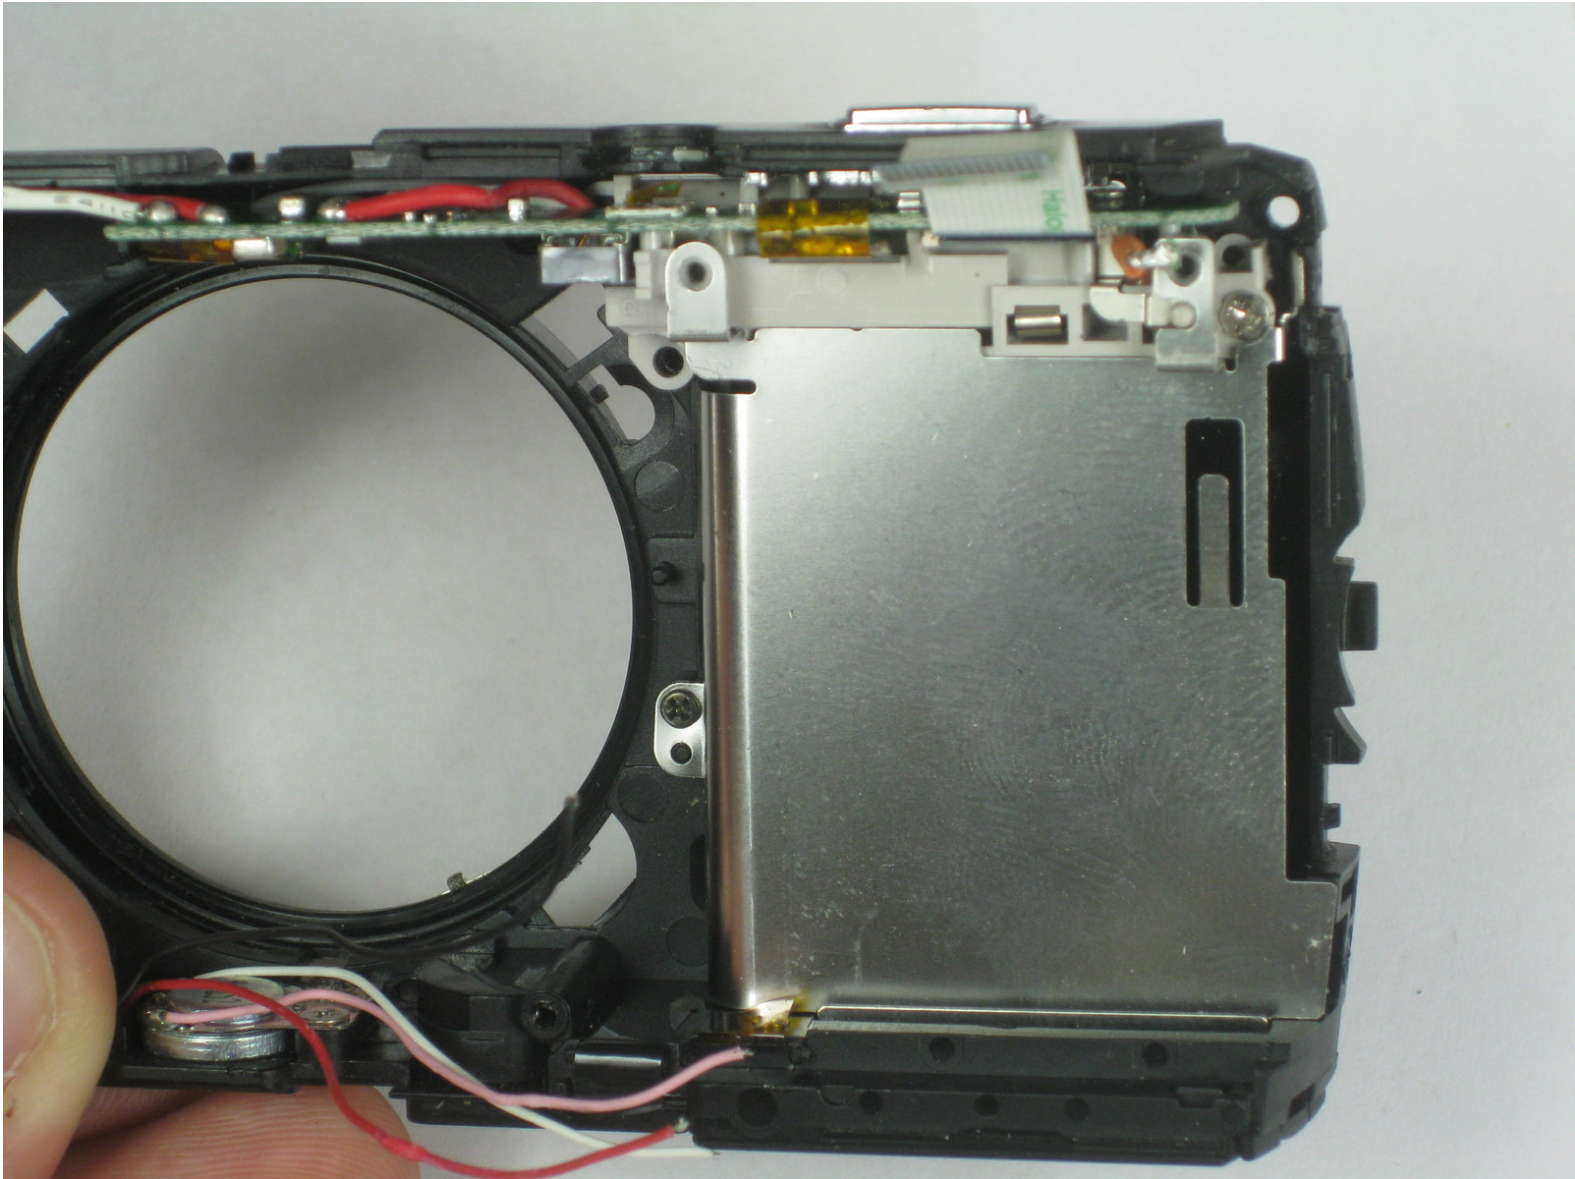



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Case



- Unscrew the bottom and right side panel screws using a #00 screwdriver. (5 screws)

Step 2



- Remove the right side panel by pulling off the large silver piece.

Step 3



- Unscrew the remaining side and front panel screws using a #00 screwdriver. (3 screws)

Step 4




- Using your thumb and forefinger, pull off the silver name plate and silver "T-shape" piece. (2 pieces)

Step 5





- Remove the black front panel by sliding it towards the lens and then pulling it up off the camera.

Step 6

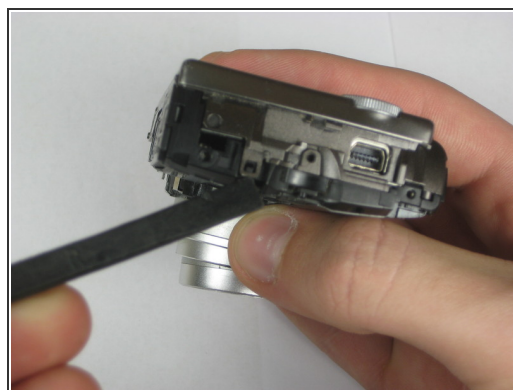



- Remove 3 screws from the front of the camera using a #00 screwdriver.
- Lift the two tabs to separate the case using a spudger. (one tab on top and one tab on the right side)

Step 7

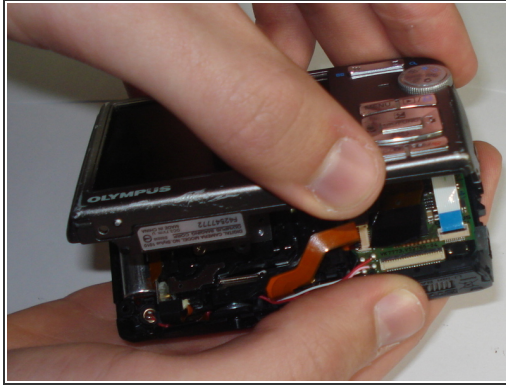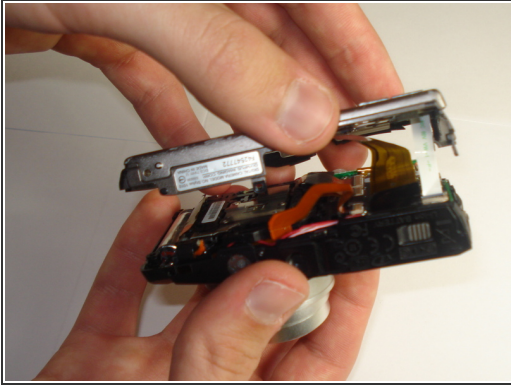


- Using a plastic spudger, lift up the black clips.
- Still using the plastic spudger, detach the gold connector strip and white connector strip.
- Using both hands, pull the camera apart into two pieces.

Step 8 — Lens

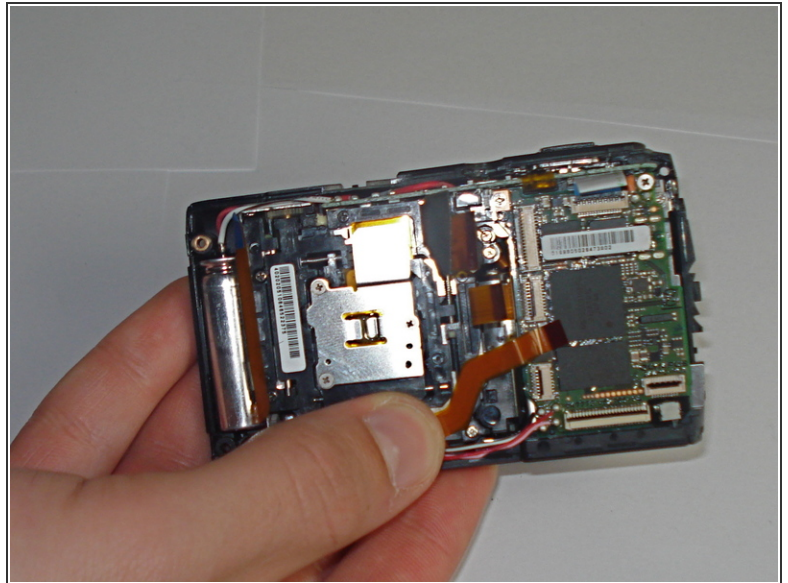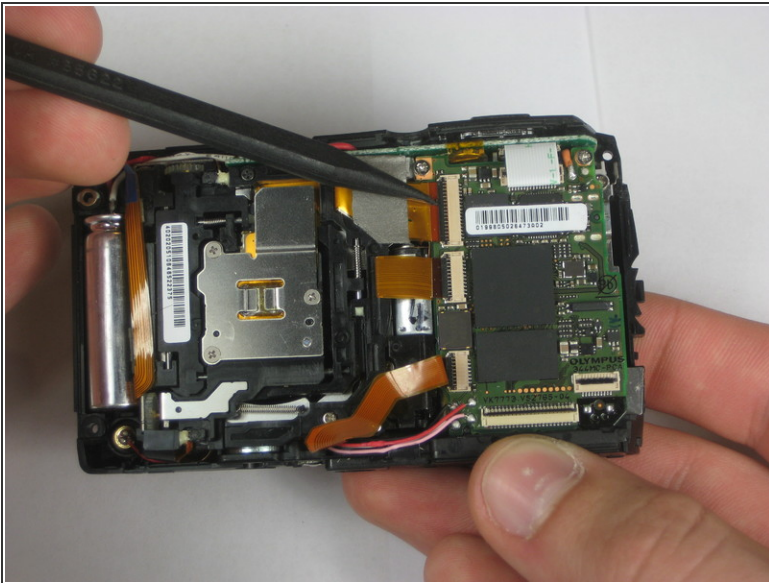



- Using a plastic spudger, lift up the black clips.
- Still using the spudger, detach the 3 gold wire tape connectors from the inside of the camera.

Step 9

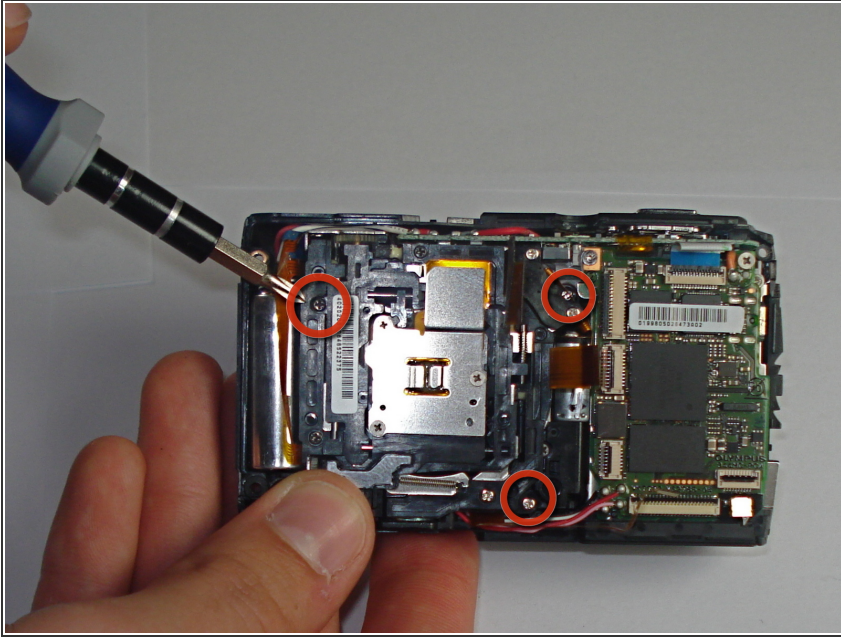


- Remove 3 screws from the inside of the camera using a #00 screwdriver.

Step 10

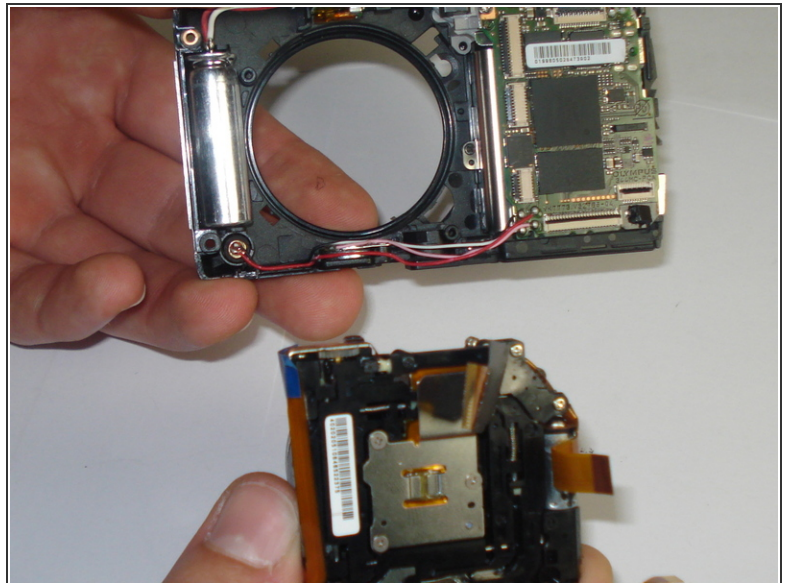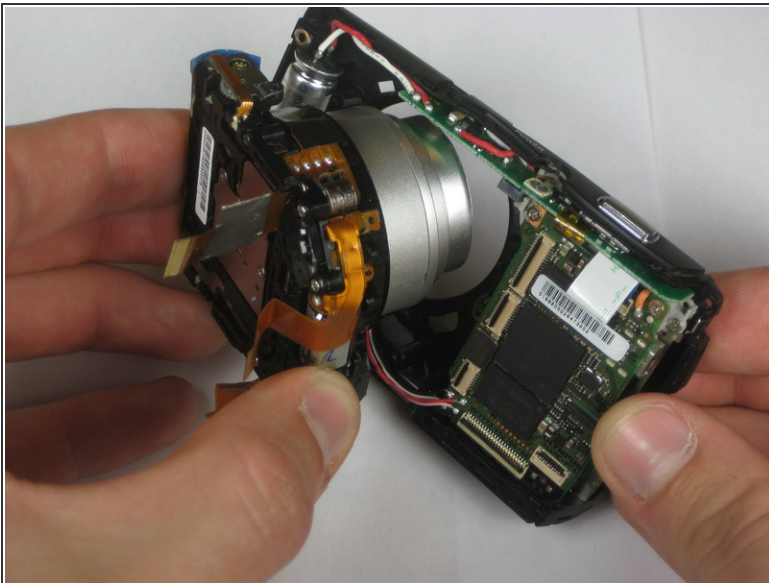

- Using your thumb and forefinger, pull the lens piece straight out from the body of the camera.

Step 11 — Logic Board

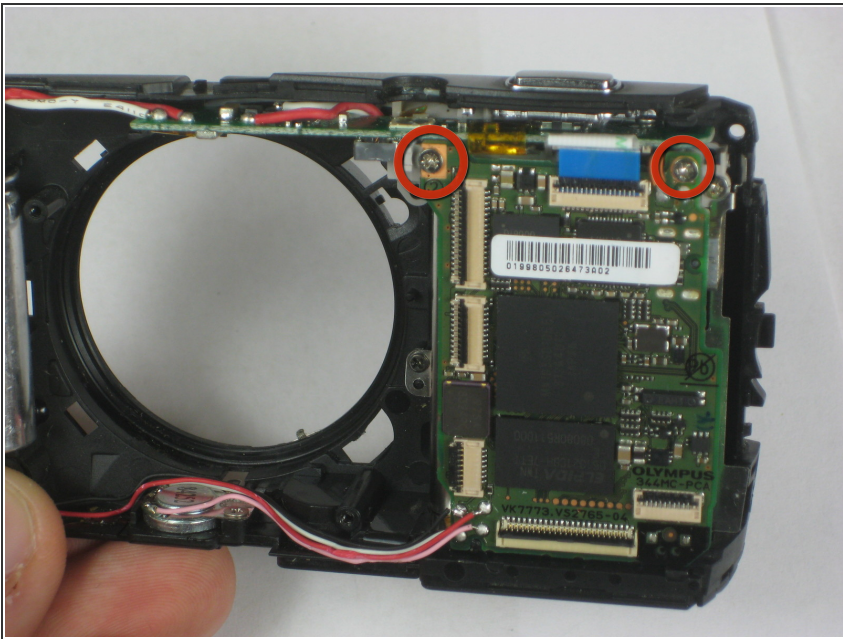


- Unscrew two screws on the right side of the camera using a #00 screwdriver.

Step 12





- Using a plastic spudger, lift up the black clips.
- Still using the spudger, detach the gold wire tape connectors from the logic board.

Step 13

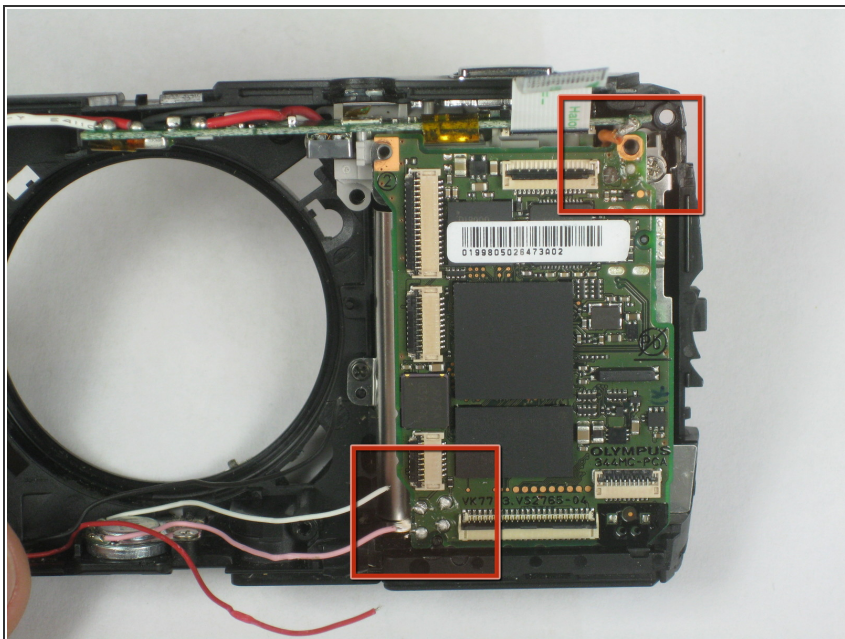



- Unsolder the upper right and lower left wires to remove logic board.

Step 14

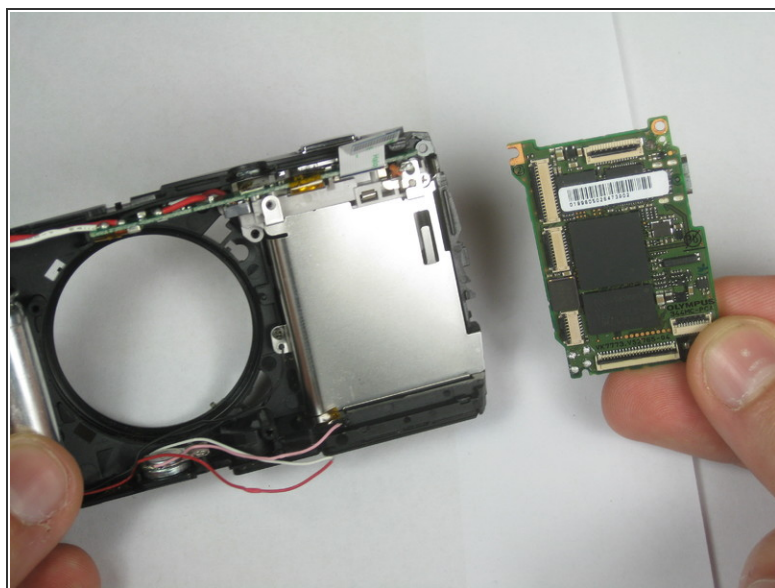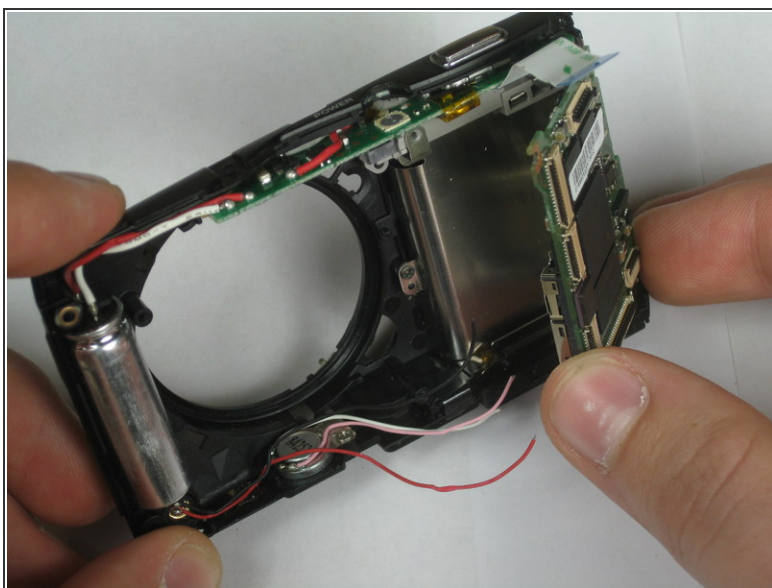




- In order to remove the logic board, grab each side of it and pull up using your thumb and forefinger.

Step 15 — Flash

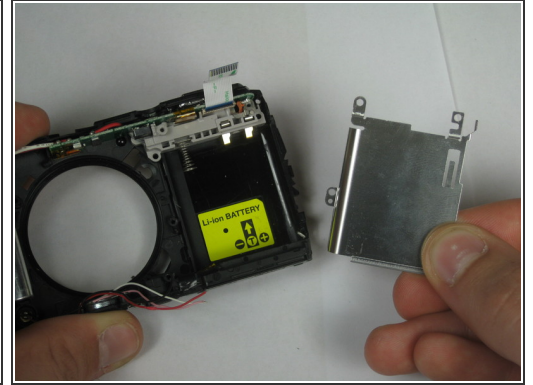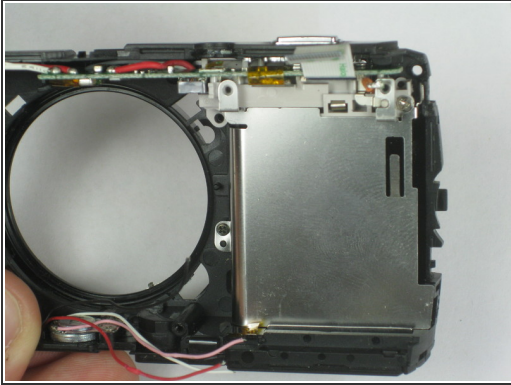



- Unscrew 2 screws using a #00 screwdriver.
- Now lift the metal piece straight up in order to remove it.

Step 16

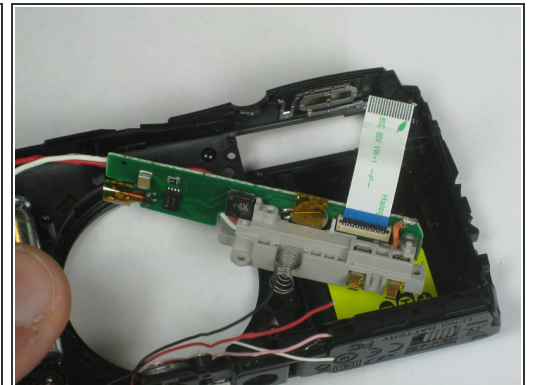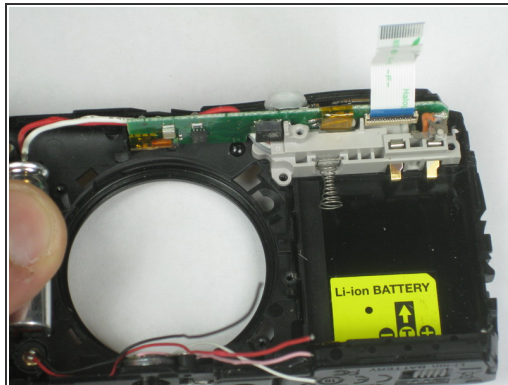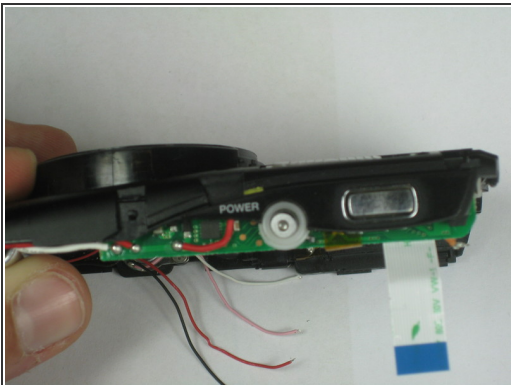




- Pull on the white tab to remove the small logic board with the flash on it.

Step 17

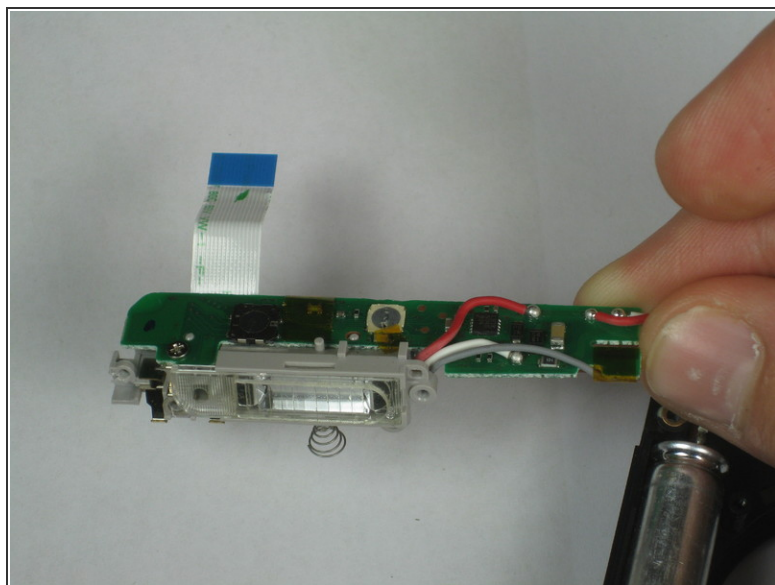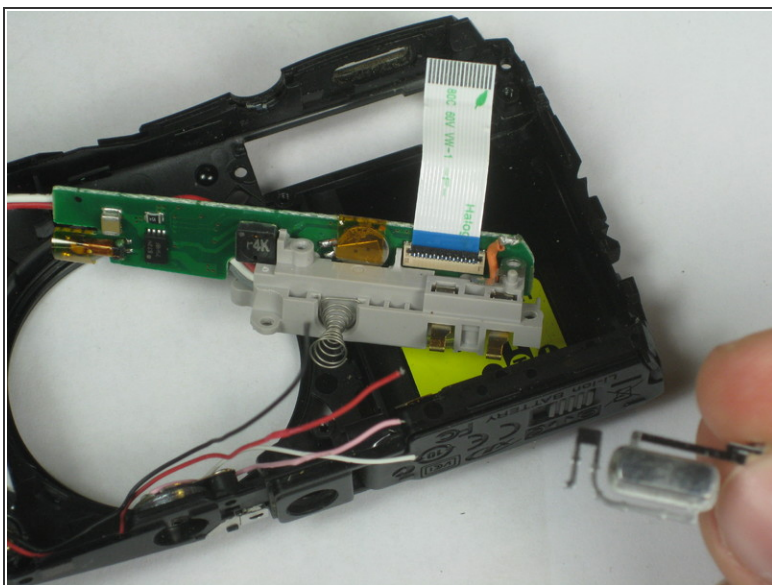



- Pull out sliver button using your thumb and forefinger.
- Now remove small logic board out of camera casing.

Step 18

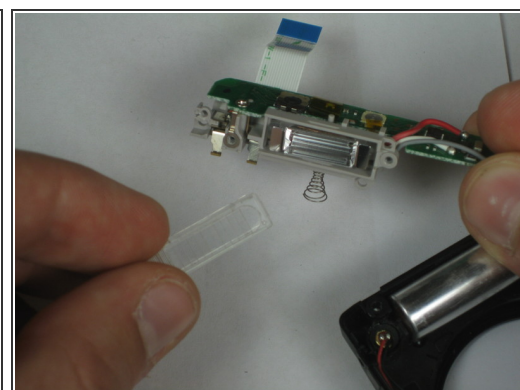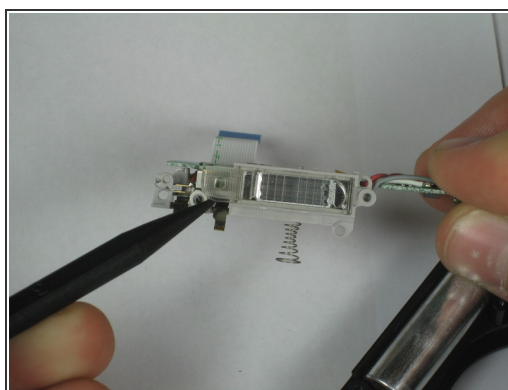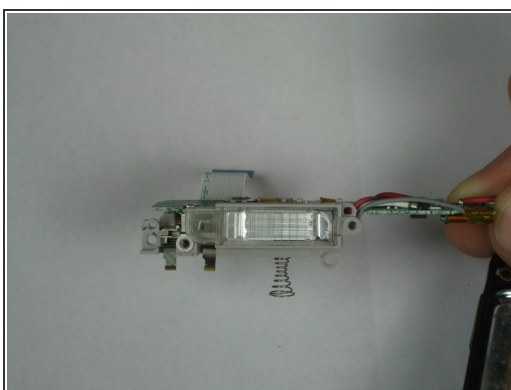

- Remove plastic flash cover using a spudger.

Step 19

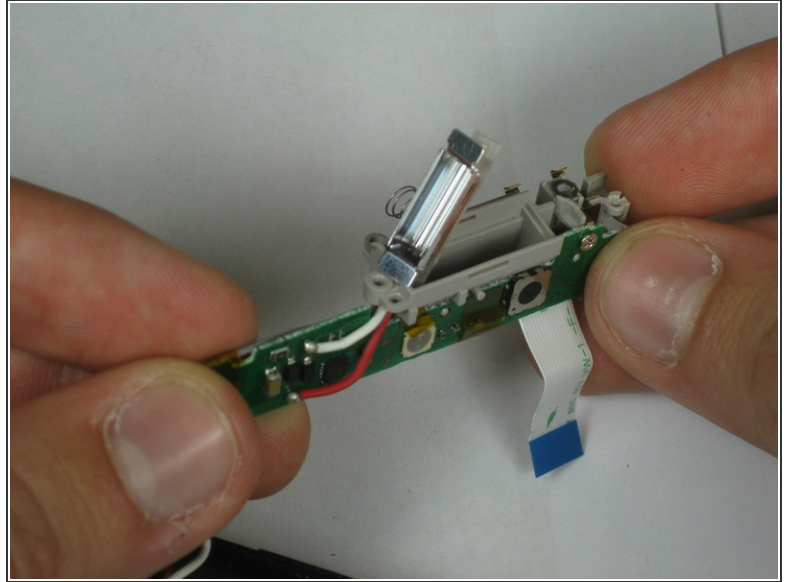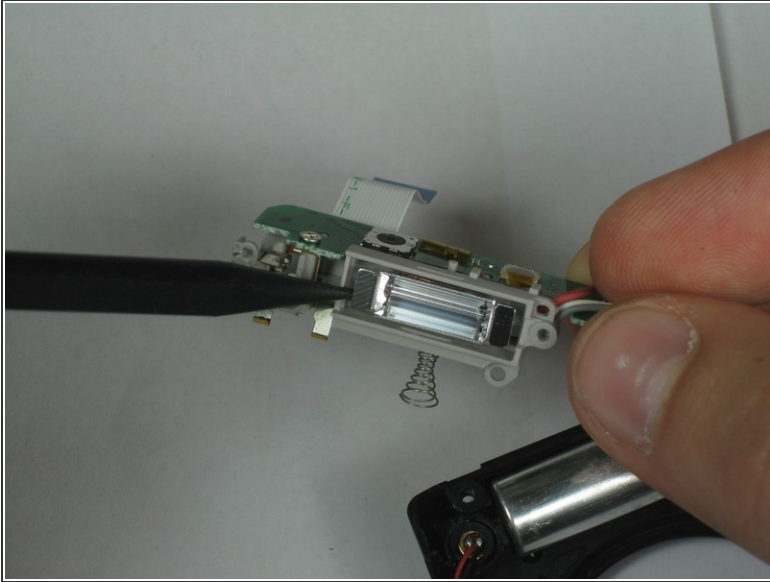

- Remove the flash bulb using a plastic spudger.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-01 12:42:34 PM.